

PRO BEACH COURTLINE BLACK

A photograph showing four rolls of black fabric, likely for medical or forensic use. Each roll is partially unrolled, revealing a wide strap with a black plastic buckle and a black cord tied to the end. The rolls are arranged in a 2x2 grid on a white background.

FUNTEC

LIEFERUMFANG SCOPE OF DELIVERY



Stückliste / Parts list		Menge / Qu.	Art.-Nr. / Item No.	Shop
①	Gurtband (Teil A), schwarz, 50 mm x 16,2 m Webbing strap (part A), black, 50 mm x 16,2 m	2	316-001	
②	Gurtband (Teil B), schwarz, 50 mm x 8,2 m Webbing strap (part B), black, 50 mm x 8,2 m	2	316-002	
③	Gummiseil, schwarz, 80 cm x 6 mm Elastic cord, black, 80 cm x 6 mm	4	316-003	
④	Sandankerplatte, ABS-Kunststoff, 15 x 15 x 0,7 cm Sand anchor plate, ABS plastic, 15 x 15 x 0,7 cm	4	111433	
⑤	Eck-Element für verstellbare, 50 mm breite Courtlines Corner element for 50 mm adjustable courtlines	4	111432	


— SCHNELLEINSTIEG

Auslieferungszustand: ~8 x 16 m



Die gebrauchsfertig vormontierte Courtline hat im Auslieferungszustand die **ungefähren Maße** 8 x 16 m (+/- 10 cm). Die Längenabweichung lässt sich aus technischen Gründen leider nicht vermeiden. Auch nach dem Einbau verändern sich die Linienlängen durch Witterung, Dehnung und Alter des Materials. Aber für ein **wettkampfgerechtes Spielfeldmaß** können die Gurtbänder an den Ecken wieder **exakt justiert** werden.


EINBAU OHNE AUSMESSEN

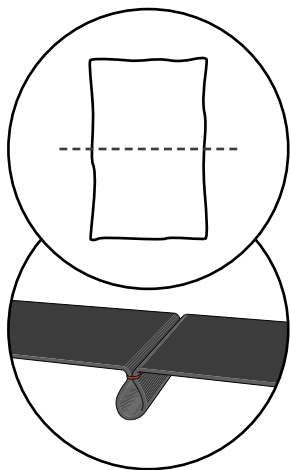

Lege die Courtline möglichst exakt und rechtwinklig aus und platziere die Mittenmarkierungen an der gewünschten Stelle, also unter dem Netz.

(Die kleinen genähten Schlaufen zeigen nach unten. Hier kann man optional zusätzliche Mittenbefestigungen anbringen.)

Vergrabe nun die Sandankerplatten. Halte dabei die Ecke an der festgelegten Position und spanne das Gummiseil auf die ungefähr doppelte Länge und vergrabe die Platte so tief, dass sie nicht mehr versehentlich herausgezogen werden kann.

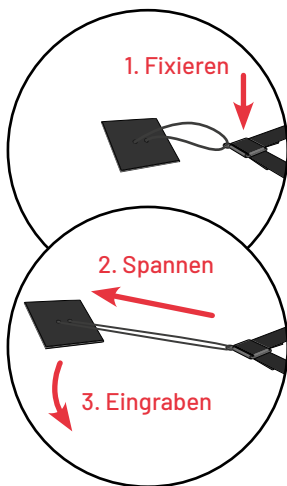


OPTIONAL: AUSMESSEN




Das Spielfeld wird an den Außenkanten der Linien gemessen. Es empfiehlt sich die Gurtbänder zunächst vorzudehnen (kräftiges Ziehen gleichzeitig an beiden Enden) und dann erst exakt zu justieren.

Die Diagonalen sollten möglichst gleich lang sein (ca. 17,9 m). Dadurch ist sichergestellt, dass das Spielfeld rechtwinklig zum Netz ausgerichtet ist.

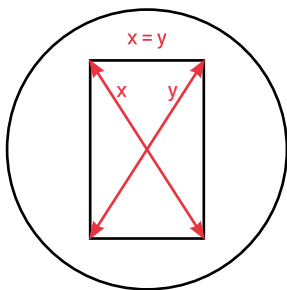


ECKEN JUSTIEREN

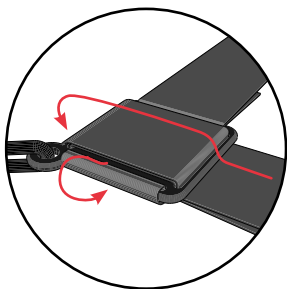


Die Gurtbänder sind auf der Ober- und der Unterseite des Eckelements eingeschlaufft. Dadurch kann man beide Gurte unabhängig voneinander einstellen.

Das überschüssige Gurtband kann bei Bedarf gekürzt werden. Es empfiehlt sich jedoch einen minimalen Überstand von 5 cm zu behalten.

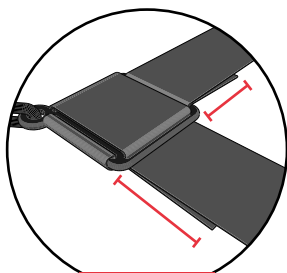

mind. 5 cm


SCHLAUFENSYSTEM

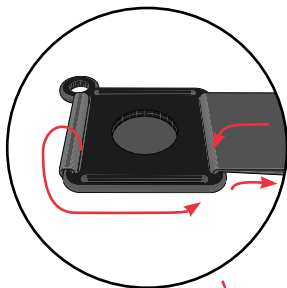

Sollten die Bänder einmal vollständig vom Eckelement entfernt worden sein, gehen Sie wie hier beschrieben vor um das Gurtband wieder einzuschlaufen.

Das erste Band wird nach unten durch die Öffnung des Eck-Elements geführt (s.o.)

Das zweite Gurtband wird von unten nach oben eingefädelt (s.r.).

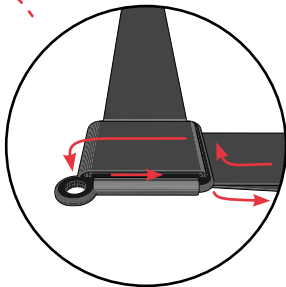

OPTIONAL: MITTENBEFESTIGUNGEN

In der Mitte der langen Gurtbänder können ganz einfach zusätzliche Sandankerplatten an den nach unten gerichteten Schlaufen befestigt werden. Die Courtline wird dadurch noch besser in Position gehalten.




— QUICK START GUIDE

Pre-assembled: ~8 x 16 m




The ready-to-use, pre-assembled courtline **measures approximately** 8 x 16 m (+/- 10 cm) when delivered. Unfortunately, a length difference cannot be avoided for technical reasons. Even after installation, the line lengths change due to weather conditions, expansion and the age of the material. However, the straps **can be readjusted precisely** at the corners to ensure that the court dimensions are **suitable for competition**.

QUICK INSTALLATION

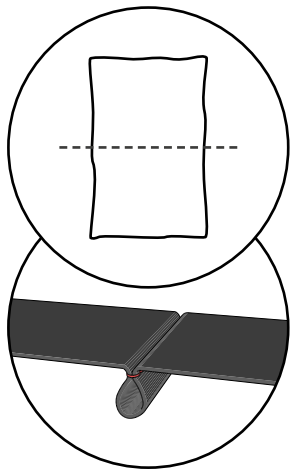

Lay out the courtline with right angles at the corners and as accurately as possible and place the centre markings in the desired position, i.e. under the net. (The small sewn loops point downwards. Additional centre anchors can be attached here.)

Now bury the anchor plates in the sand. Hold the corner in the desired position, pull the elastic cord to approximately twice its length and bury the plate deep enough so that it cannot be accidentally pulled out.

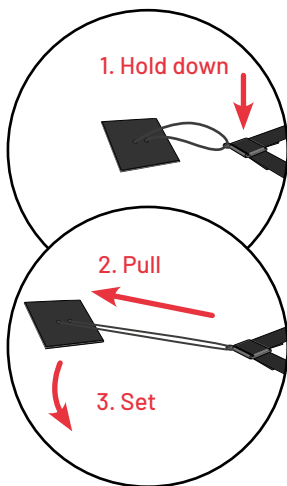


OPTIONAL: MEASURING




The playing field is measured at the outer edges of the lines. We recommend to pre-stretch the straps (pull firmly on both ends at the same time) and then adjust them precisely.

The diagonals should be as close to the same length as possible (approx. 17.9 m). This ensures that the playing field is aligned at right angles to the net.

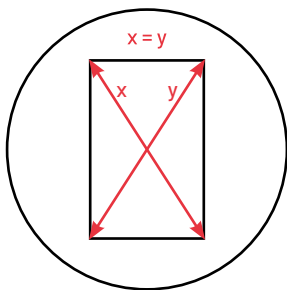


ADJUST AT CORNERS

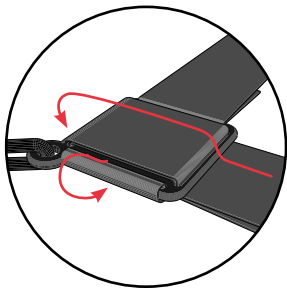


The straps are looped through the top and bottom of the corner element. This allows both straps to be adjusted independently of each other.

The excess webbing can be shortened if necessary. However, it is advisable to leave a minimum excess of 5 cm.

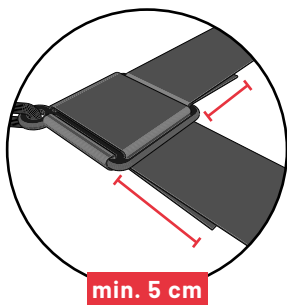


LOOPING SYSTEM

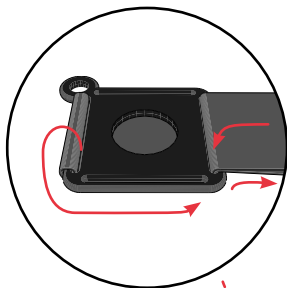

Eventually the straps have been completely removed from the corner element. If so, proceed as described to reattach the straps.

The first strap is fed downwards through the opening in the corner element (see above).

The second strap is threaded from bottom to top (see right).

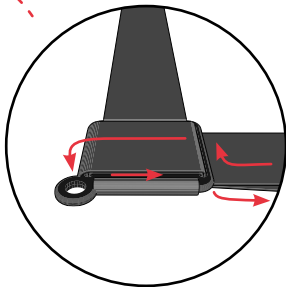

OPTIONAL: CENTRE ANCHORS

Additional sand anchor plates can be easily attached to the downward-facing loops in the middle of the long straps. This helps to keep the courtline even more securely in position.





MANUALMANUALMANUALMA
NUALMANUALMANUALMA

PRO BEACH COURTLINE BLACK

Art.-Nr. / Item No.: 111316



FUNTEC ONLINESHOP



FUNTEC WEBSITE

FUNTEC

Löhestr. 25 · DE - 53773 Hennef

+49(0)2242 3231

service@funtec.de

www.funtec.de